



Issue: The machine does not turn on

Explanation: If the FX5PRO COMPAQ does not respond when pressing the power button, there may be an issue with the electrical connection or safety system.

Solution:

1. Make sure the machine is connected to a **230V power source**.
2. Check that the **emergency stop button** is not engaged; if it is, turn it counterclockwise to release it.
3. Inspect the power cable for any damage.
4. If the problem persists, refer to the **User Manual, section "Maintenance and Safety"**.