



Issue: The push system does not respond

Explanation: If the push system does not move forward or backward, there may be an obstruction or lack of lubrication in the internal components.

Solution:

1. Check that the **cartridge outlet valves are open** before starting the push process.
2. Inspect the guide for obstructions and remove any accumulated debris.
3. Lubricate the moving parts using the recommended lubricant in the **Maintenance Manual**.
4. If the problem persists, consult the **troubleshooting section in the manual**.